



INSTALLATION INSTRUCTIONS STANDARD, TWO-ON-ONE & SUNDOWN SHADES

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.

Before Installing




Remove shade from the package. Keep all packaging until the shade operates to your satisfaction.

- Contents of your hardware package may vary depending on options chosen.
- Additional fasteners may be needed based on your specific mounting surface.

Tools Needed

Power Drill, 1/4" Driver and drill bits
Tape Measure
Flat blade Screwdriver
Phillips Screwdriver
Pencil
Level




Mounting Surface	Fastener
Wood	#6 Hex Head Provided 
Drywall, Plaster	Wall Anchors Not Provided 
Metal	Sheet Metal Not Provided 

Bracket Requirements


With inside and ceiling mounts, use a level to check that the mounting surface is level. Shim brackets if necessary. With outside mounts, the tops of the brackets must be level and aligned at the same height. For wider shades, additional brackets are required for both inside and outside mounts. (See chart)

Shade Width	Brackets Required
15" - 48"	2
48 1/16" - 72"	3
72 1/16" - 90"	4
90 1/16" - 120"	5
120 1/16" - 156"	6


Small Cassette

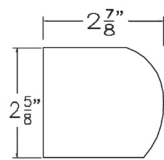

Bracket Provided

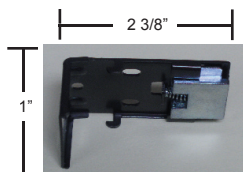


Optional Extension Bracket

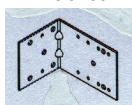


Optional Spacer Bracket




Large Cassette

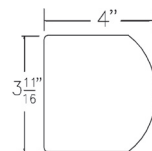


Bracket Provided

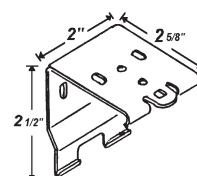

Sundown Cassette

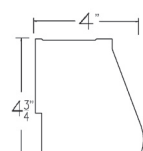


Bracket Provided

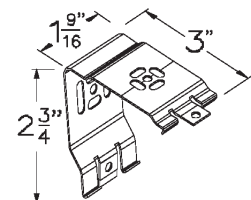

Bracket Placement

- Bracket placement is the same for inside or outside mounts.
- Measure 2" in from the ends of the headrail and mark the bracket location on the mounting surface.
- Space additional brackets evenly between the end brackets.

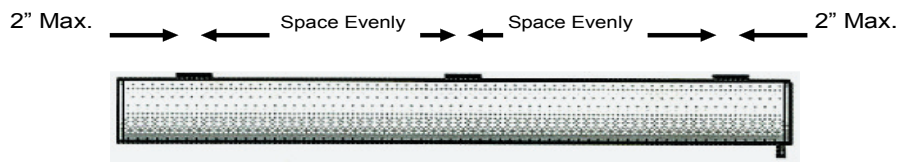

Inside Mount Applications

Small Cassette

1 3/4" minimum depth is required for inside mount. 3 5/8" depth is required for inside flush mount. Use two mounting screws (and appropriate fasteners if needed) to attach each installation bracket to the top sill of the window opening.

- Hold the shade and tilt the top front of the headrail 45° toward the window.
- Insert the prongs on the front of the bracket into the front lip of the headrail.
- Push the back of the headrail up until it snaps into the tab on the back of the bracket.

Large Cassette

1 1/2" minimum depth is required for inside mount. 4 1/4" is required for inside flush mount. Use two mounting screws (and appropriate fasteners if needed) to attach each installation bracket to the top sill of the window opening.


End Caps are not attached to the Large Cassette to avoid damage in shipping. Attach end caps before installing the shade. Use two mounting screws (and appropriate fasteners if needed) to attach each installation bracket to the top sill of the window opening.

- Hold the shade and tilt the top front of the headrail 45° toward the room.
- Insert the bottom back of the headrail into the prongs on the bottom of the bracket.
- Tilt the headrail up pushing back until the prongs on the front of the bracket snap into the headrail.


Sundown Cassette

1 7/8" minimum depth is required for inside mount. 4 1/2" is required for inside flush mount. Use two mounting screws (and appropriate fasteners if needed) to attach each installation bracket to the top sill of the window opening.


- Hold the shade and tilt the top front of the headrail 45° toward the room.
- Insert the bottom back of the headrail into the prongs on the bottom of the bracket.
- Tilt the headrail up pushing back until the prongs on the front of the bracket snap into the headrail.

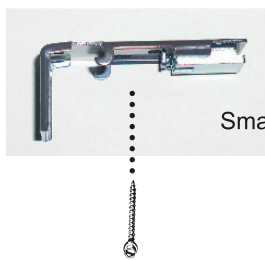

Small Cassette

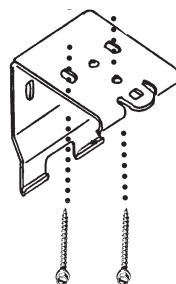

Large Cassette

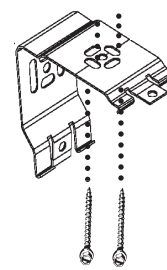

Sundown Cassette

Outside Mount Applications

The minimum mounting height for outside mount is 1" for the small cassette, 2" for the large cassette and 3" for the Sundown.


- Center each bracket over the mark made on the mounting surface and attach using two screws and appropriate fasteners if needed.
- Use a level to check that the brackets are level and aligned.

Small Cassette

- Use a level and mark the mounting surface for bracket placement.
- Center each bracket over the mark made on the mounting surface and attach using two screws.
- **Use a level to check that the brackets are level and aligned.**
- Hold the shade and tilt the bottom of the headrail 45° towards the room. Insert the anodized spring-loaded plate on the front of the bracket into the front groove on the top of the headrail.
- Push the back of the headrail up until it snaps into the back of the bracket.
- If an extension bracket is being used, attach the installation bracket after the extension bracket is installed. Extension brackets provide an additional 1 1/8" clearance.
- Up to two optional spacer brackets can be attach. Each spacer provides an additional 3/8" clearance.

Large & Sundown Cassette


- Hold the shade and tilt the headrail 45° towards the room. Insert the groove on the bottom backside of the headrail into the prongs on the bottom back of the bracket.
- Push the top of the headrail up until it snaps into the front of the bracket.

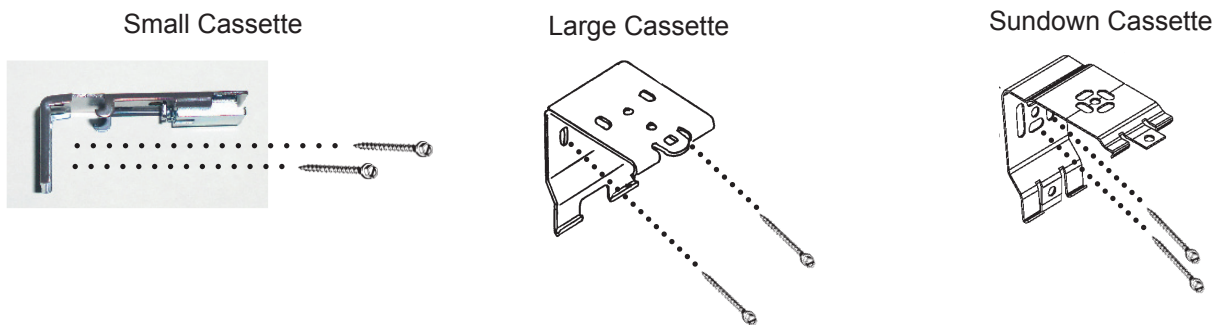

Install the Cord Tensioner

The cord tensioner reduces the hazards of strangulation and entanglement of children and pets by limiting the access to the chain control. Anchor the cord tensioner to the window frame or wall.


- Lower the shade.
- Hold the cord tensioner upright as shown in the picture.
- Position the cord tensioner on the window frame or wall so that the cord tensioner and control chain do not interfere with raising and lowering the shade. The cord tensioner should be installed without stretching or pulling down on the control chain. Do not twist or cross the control chain.
- Holding the cord tensioner upright, and in position as shown, insert and secure the screw through the hole. The mounting screw must be secured into a solid surface or wall fastener.

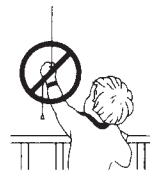

Install Optional Hold-Downs

Hold-Downs are available for outside mount. The pins are installed in the end caps on the bottom rail at the factory.

- Lower the shade. Line up the bottom of the hold-down bracket with the bottom of the bottom rail.
- Mark for the screws through the back of the hold-down bracket.
- Screw hold-down to the wall or trim. Anchors (not included) may be required if screwing into drywall.
- Tilt the bottom rail and insert each pin into the hold down.

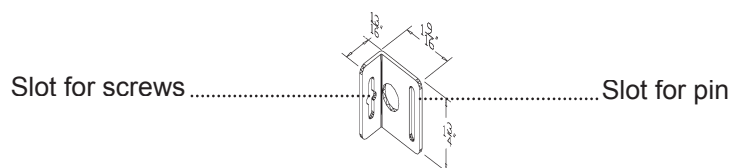

How To Prevent Skewing

Any product that rolls on a tube or roller has a potential to skew. All shades are checked for skewing at the time of inspection. The factory will shim the roller if necessary to assure your shades are rolling straight. When installing, make sure the brackets are level. If the brackets are off by even as little as 1/8", skewing can occur. If skewing occurs after installing the shade, please follow these instructions:

- Lower the shade all the way down until you see where the material is attached to the tube or roller.
- Gently grasp the very top, back fabric directly below the headrail on the side that needs adjustment.
- Pull the fabric to the side of the shade. Do not pull the netting if possible.
- Apply the amount of pressure needed to get the fabric to slide in the back of the headrail.
- Repeat on the side needed until front and back fabrics are aligned.

Operate the Shade

Allure - Pull on the back of the chain to lower the shade. Once the shade reaches the full length, the view can be adjusted.

Sundown - Pull on the back of the chain to lower the shade. Once the shade reaches the full length, the view can be adjusted. Continue pulling until the Sundown material is exposed. The view can be adjusted to show all or part of the Sundown material.

Sundown Caution: As Allure Sundown transitions from light filtering to room darkening fabric, the bottom rail will drop below the ordered length. Once the room darkening fabric has been completely lowered the bottom rail will raise back to its ordered length. This extra drop experienced during transition can distort and damage the fabric if the bottom rail hits the window sill.

Care and Cleaning

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damaged the shade.

Remove the Shade

Small Cassette: To remove shade from the spring loaded bracket, raise the shade. Push in on the top front of the headrail and tilt the bottom of the shade toward the room to remove from bracket.

Large or Sundown Cassette: Insert a flat blade screwdriver into the release tab and twist. Tilt the shade toward the room to remove from brackets.

