

ROMAN SHADE INSTALLATION INSTRUCTIONS

STANDARD, TOP DOWN/BOTTOM UP AND ACHIEVA SHADES

Thank you for choosing Genesis Roman Shades. With proper installation and care, your new shade will provide many years of beauty and performance.

TOOLS


Drill with #6 nutdriver or 1/4" socket
Screwdriver, Phillips
Tape measure
Pencil
Awl
Wall anchors (optional)
3/16" drill bit

PARTS LIST

Brackets: 2 - 16" to 36"
3 - 36 1/8" to 72"
4 - 72 1/8" to 96"
Screws: 1 1/2" into wall
1 1/2" into headrail
3" 7/8" proj.
Cord cleat 1 per shade

Standard Installation Outside Mount

1. Begin by unpacking the product to insure **all necessary parts** are present.
 2. Transfer and center the shade's width onto the opening, mark the outside and bottom edges. See illustration if needed.
 3. Measure in approx. 4 1/2" from each mark to determine the two end bracket locations. These mark the center and top of your brackets. An appropriate wall anchor may be required depending on the mounting surface and weight of the shade.
- **NOTE:** Always place the bracket on the shade to check for hardware or other obstructions that may interfere with shade operation adjust bracket location accordingly.
4. Secure the brackets to the wall (using 1 1/2" screws) and center the shade on the brackets. Finally, secure the shade to the brackets (using 1 1/2" screws). Remember, if using "New York" brackets, these are designed to fit through the slot cut into the Genesis headrail. Using an awl, carefully punch a hole through the fabric covering the headrail to eliminate any possibility of ruining the fabric as the screws are tightened.
 5. Check for smooth operation of the shade. (See back page) If the shade binds, all hardware and lift cords should be clear of brackets or other obstructions.


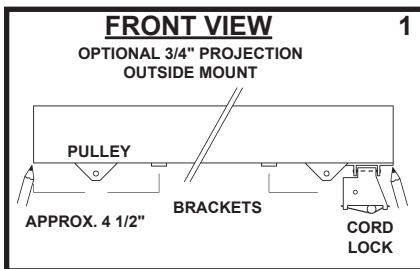


Outside Mount




Standard bracket

When installing 7/8" proj. some installers screw directly through the headrail into the wall, thus eliminating brackets. (see arrow illust. 2)

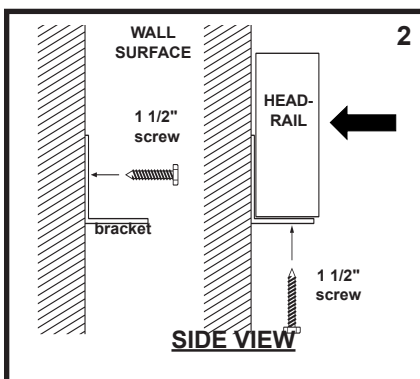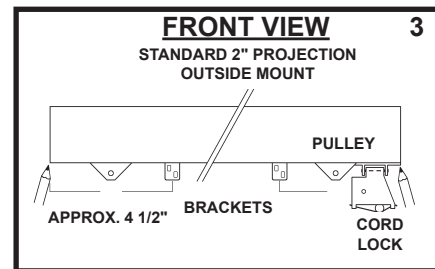



If using "New York" bracket (2" projection only) instead of std. bracket

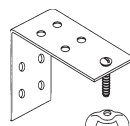

screw fits through slot in headrail (see illust. 4)


Valance and cord lift systems require "New York" brackets.

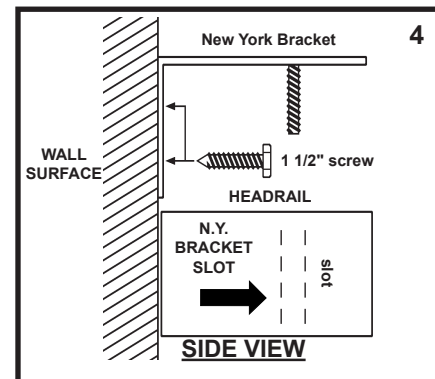

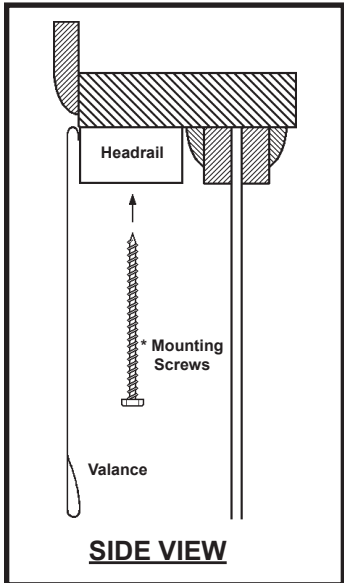

THIS REPRESENTS AN INSIDE MOUNT WITH 2" PROJECTION. THE MOUNTING SCREW CAN BE INSERTED DIRECTLY THROUGH THE HEADRAIL.


Inside Mount

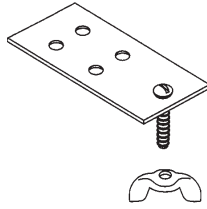

IF USING OPTIONAL INSIDE MOUNT "NEW YORK" BRACKET (2" PROJECTION ONLY) THE SCREW FITS THROUGH THE SLOT CUT INTO THE HEADRAIL.

* A VARIETY OF FASTENERS OR SCREWS MAY BE SUBSTITUTED BY INDIVIDUAL INSTALLERS.


THE ACHIEVA CLUTCH SYSTEM USES STANDARD BRACKETS.

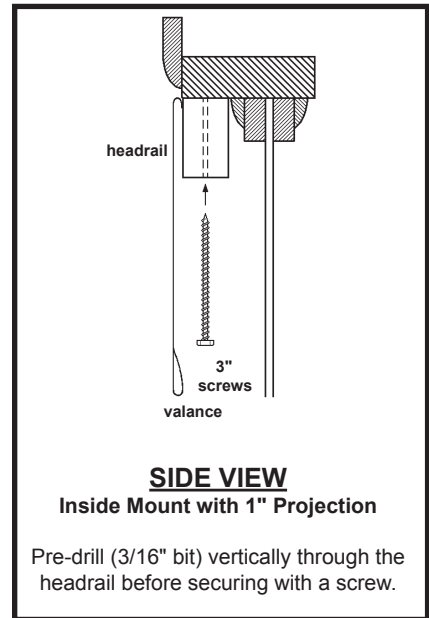

Pre-drill (3/16" bit) vertically through the headrail before securing with a screw.

THIS REPRESENTS AN INSIDE MOUNT WITH 7/8" PROJECTION. PRE-DRILL (3/16" BIT) VERTICALLY THROUGH THE HEADRAIL BEFORE SECURING WITH A SCREW.

STANDARD OPERATION

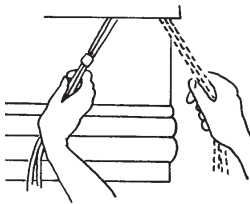

pull cord toward
inside to release


pull cord toward
outside to lock

TOP DOWN / BOTTOM UP OPERATION - Shade has two cords. Left cord raises the shade from the bottom up to the top of the window. Right cord lowers shade to the bottom of the sill.

ACHIEVA CLUTCH OPERATION - Continuous Cord Loop system. Pulling the back side of the cord loop will lower the shade. You can stop pulling when the shade reaches the sill, or continue pulling and the shade will raise back to the top of the window.

Install Optional Hold-Downs

- A. Lower the shade and place the pins from the hold-down brackets into the end caps on the bottom rail.
- B. On the mounting surface, mark the bracket hole locations.
- C. Check that the brackets are level and attach them to the mounting surface using two screws.

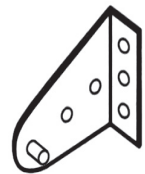

Care and Cleaning

Regular vacuuming with a soft bristle attachment will maintain a like-new appearance for most cloth fabrics. Wiping with cold water and a mild detergent will take care of most vinyl fabrics.

